


QUICK START GUIDE

Make sure you follow these instructions for a quick start with the TC1000A72V for SurRon LightBee/Segway X260 and Torp motor TM25

Connect the wires as shown below! Use only screws and tools included in the box. The Product must be used in combination with the **stock circuit breaker** at all times! In case of incorrect installation, you will lose the Warranty and cause serious damage to the Product!

TC1000 Controller is not an original SurRon/Segway part so you are using it at your own risk.

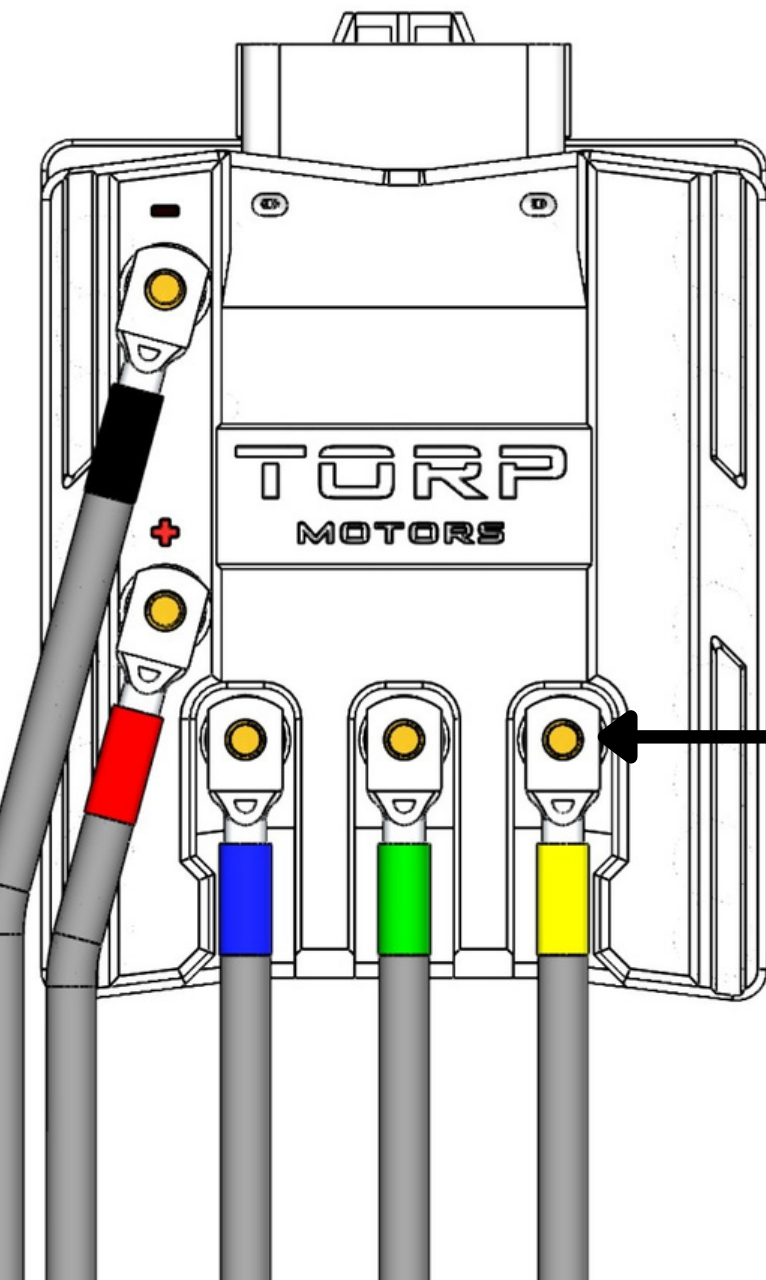

Power Wires **IMPORTANT**

Make sure to connect:

The **red battery wire** to the positive (+) electrode ●

The **black battery wire** to the negative (-) electrode ●

Phase Wires

Make sure to connect:

The **Blue motor wire** to the the letter B ●

The **Green motor wire** to the the letter G ●

The **Yellow motor wire** to the letter Y ●


M6 screws

with Washers

Max Torque 4.5 Nm

Fasten lightly!

ALWAYS USE A CIRCUIT BREAKER (FUSE)!

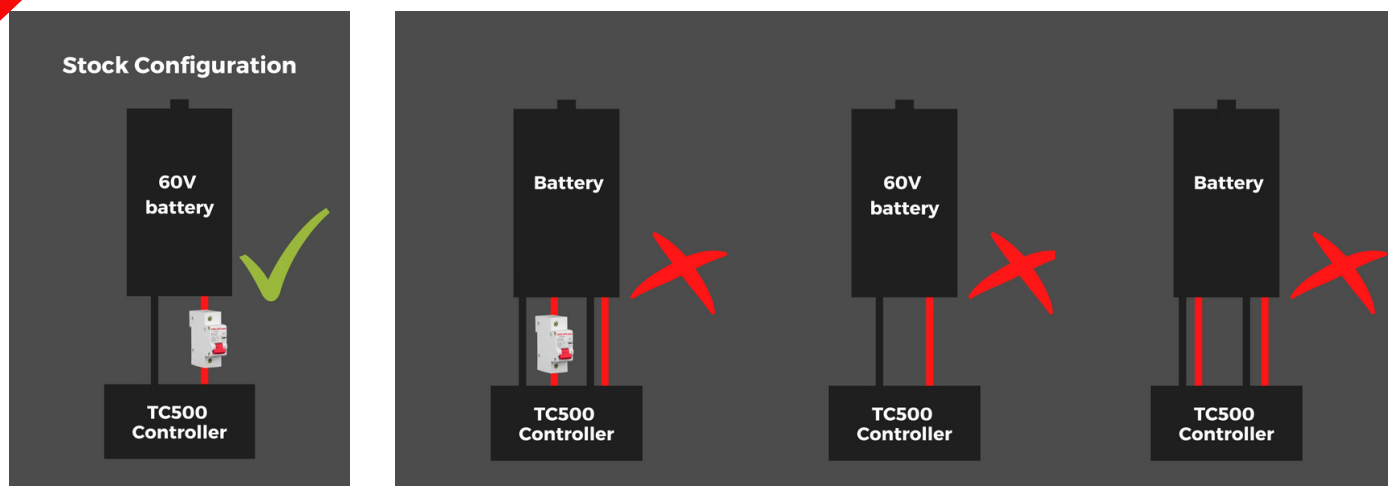

The TC1000 controller must always be used with a stock SurRon/Segway circuit breaker (fuse)!
Not using the circuit breaker with controllers is dangerous and can cause serious damage!

USE TORP APP FOR SETUP.



HOW TO CONNECT?

- Go to the Google Play Store (Android) or AppStore (IOS) & download the App to your smartphone.
- Allow the App to access the phone's location, photos & media & accept the Terms & Conditions.
- Put the key into the ignition & turn on your bike.
- The App will automatically detect your controller.
- Choose your controller from the list. The Bluetooth ID can be found on the label on the side of the controller.
- Now you are connected and can start setting up your controller.

IMPORTANT: After the installation make sure to go to the 5th screen of the Torp App, click on the CALLIBRATION button, select LIGHT BEE (for stock motor) or TM25 (for Torp motor) and follow the INSTALLATION WIZARD.

For additional help contact us at support@torp.hr